



Nr	Partnr	Description	75 Std	76 Std	76 Ltd	77 Std	78 Std	79 Std	Serialnr	Areacode
1	30280-371-000	Condensor compl.	1	1	1	1	1	1		
2	31500-371-671	Battery assy.	1						To 1020150	
2	31500-371-672	Battery assy.	1	1	1	1	1	1		
2	31500-431-671	Battery assy.	1	1	1	1	1	1		
2	31500-463-671	Battery (Y50-N18L-A)	1	1	1	1	1	1		
2	31500-463-677	Battery assy.	1	1	1	1	1	1		
2	31500-463-721	Battery assy.	1	1	1	1	1	1		
2	31500-463-743	Battery assy.	1	1	1	1	1	1		
2	31500-463-747	Battery (Y50-N18L-A)	1	1	1	1	1	1		
3	31561-371-000	Cover, battery	1		1				To 2040165	
3	31561-371-000	Cover, battery		1						
4	31700-371-000	Rectifier assy., silicon	1	1	1	1	1	1		
5	32213-371-000	Cord assy. A, sub	1	1	1	1	1	1		
6	32401-371-000	Cable, starter battery	1	1	1	1	1	1		
6	32401-371-010	Cable, starter battery	1	1	1	1	1	1		
7	32412-371-000	Cover, battery terminal				1	1	1		
7	32412-463-000	Cover, battery terminal				1	1	1		
8	32420-371-000	Cable, starting motor	1	1	1	1				
8	32420-431-000	Cable, starting motor					1	1		
9	32601-371-000	Cable, battery ground	1	1	1	1	1	1		
9	32601-463-000	Cable, battery ground	1	1	1	1	1	1		
9	32601-MG9-000	Cable, battery ground	1	1	1	1	1	1		
10	35850-371-670	Switch assy., Starter magnetic	1	1	1	1				
10	35850-431-007	Switch assy., Starter magnetic					1	1		
11	35856-371-000	Suspension, magnetic switch	1	1	1	1				
11	35856-431-000	Suspension, magnetic switch					1	1		

Nr	Partnr	Description	75 Std	76 Std	76 Ltd	77 Std	78 Std	79 Std	Serialnr	Areacode
12	35857-371-000	Cover, magnetic switch	1	1	1	1	1	1		
13	38205-371-000	Holder, spare fuse	1	1	1	1	1	1		
14	38250-371-153	Box assy., main fuse	1	1	1	1	1	1		
14	38250-ME9-005	Box, main fuse	1	1	1	1	1	1		
15	38253-371-000	Stay, main fuse	1	1	1	1				
15	38253-431-670	Stay, main fuse					1	1		
16	50325-371-000	Box, battery		1					To 2040165	
16	50325-371-010	Box, battery		1					To 2040165	
16	50325-371-020	Box, battery		1					To 2040165	
17	50325-371-000	Box, battery	1		1					
17	50325-371-010	Box, battery	1		1	1	1	1		
17	50325-371-020	Box, battery	1		1	1	1	1		
18	50326-371-000	Plate, battery support	1	1	1	1	1	1		
19	50328-371-000	Rubber A, battery mounting	2	2	2	2	2	2		
20	51404-044-030	Rubber, FR. Fork rebound stopper	1	1	1	1	1	1		
21	93500-05008-0A	Screw, pan, 5x8	2	2	2	2				
22	83109-371-000	Pin, shelter hinge	1	1	1	1	1	1		
23	83618-323-000	Rubber, battery box	6	6	6	7	6	6		
24	87506-371-670	Mark, battery caution	1	1	1	1	1	1		
25	93893-05012-00	Screw-washer, 5x12	2	2	2	2	2	2		
26	90310-KA3-711	Nut, hex., 6mm	2	2	2	2	2	2		
26	94000-06000-0S	Nut, hex., 6mm	2	2	2	2	2	2		
26	94001-06000	Nut, hex., 6mm	2	2	2	2	2	2		
26	94001-06000-0S	Nut, hex., 6mm	2	2	2	2	2	2		
26	94001-06008-0S	Nut, hex., 6mm	2	2	2	2	2	2		
26	94001-06200-0S	Nut, hex., 6mm	2	2	2	2	2	2		
26	94030-06000	Nut, hex., 6mm	2	2	2	2	2	2		
27	94111-05000	Washer, spring, 5mm	2	2	2	2				
28	94111-06000	Washer, spring, 6mm	2	2	2	2	2	2		
29	94201-12100	Pin, cotter, 1.2mm				1	1	1		
29	94201-12150	Pin, cotter, 1.2x10				1	1	1		
29	94201-12200	Pin, cotter, 1.2mm				1	1	1		
30	50332-371-000	Band, battery	1		1					
30	50332-371-000	Band, battery		1					To 2040165	
30	95012-15000	Band D, battery				1	1	1		
30	95012-15001	Band, battery				1	1	1		
31	91582-371-980	Bolt, flange, 6x12			3					
31	95700-06012-08	Bolt, flange, 6x12	3	3	3	3	4	4		
31	95700-06012-0B	Bolt, flange, 6x12			3					
31	95700-06012-18	Bolt, flange, 6x12			3					
31	95701-06012-08	Bolt, flange, 6x12	3	3	3	3	4	4		
31	95701-06012-18	Bolt, flange, 6x12			3					
32	95700-06032-00	Bolt, flange, 6x32	2	2	2	2				
32	95701-06032-00	Bolt, flange, 6x32	2	2	2	2				
33	98200-53000	Fuse F (30A)	2	2	2	2	2	2		
	32411-230-000	Cover, starting motor terminal					1	1		

Nr	Partnr	Description	75 Std	76 Std	76 Ltd	77 Std	78 Std	79 Std	Serialnr	Areacode
	32411-253-000	Cover, starting motor terminal					1	1		